

 

 


























Original	Substitut
	TV
	TV
	Audio
	TV / VCR
	Power
	1
	2
	3
	Text
	4
	5
	6
	Subtitle
	7
	8
	9
	Sound

Original	Substitut
	Alt
	0
	i
	Setup
	Exit
	Up
	Navigator
	Left
	OK
	Right
	Vol +
	Down
	CH +
	Vol -
	Mute
	Recall
	CH -





Original	Substitut	Original	Substitut
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 Check	 Display / Media		

