















 


 
 


Original	Substitut
Open / Close	Eject / Surround
Power	Power
CD / DVD	Shift + 3
CD / DVD	Shift + 2
Band	Smart / List
Band	Shift + 6
AUX	Shift + 7
Mute	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
1	1
2	2
3	3
RDS	AV / Input / RDS
4	4
5	5
6	6

Original	Substitut
PTY	Shift + Smart / List
7	7
8	8
9	9
PTY Search	Shift + Display / Media
Repeat	Green / APP / Repeat
0	0
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Sound Mode	Sound / Title
Preset+	Shift + >> / Preset+
Preset+	CH+ / Page+
Audio	Audio / Lang I/II
Volume+	Vol+
Preset-	Shift + I<< / Preset-
Preset-	CH- / Page-





	Original	Substitut		Substitut
	Subtitle		Subtitle / EQ	
	Volume-		Vol-	
	Zoom		Zoom / Size	
	Return		Back / Return	
	Up		Up	
	Left		Left	
	Enter		OK	
	Right		Right	
	Menu		Menu / Home	
	Down		Down	
	Display		Display / Media	
	Setup		Setup / OPT /	
	Stop		Stop / Hold	
	Pause / Step		Pause / Step / Freeze	
	Play		Play / Slow	
	<< / Slow Scan-		<< / Tune-	
	>> / Slow		>> / Tune+	

	Original	Substitut	
	I<< / Skip Scan-		I<< / Preset-
	>>I / Skip Scan+		>>I / Preset+
	Title		Shift + Sound / Title
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Angle		Info / Angle

