



Original	Substitut	Original	Substitut
Standby	Power		
Page Up	CH+ / Page+		
Play/Pause	Play / Slow		
Page Down	CH- / Page-		
Up	Up		
Auto	Info / Angle		
Left	Left		
Menu	Menu / Home		
OK	OK		
Right	Right		
Source	AV / Input / RDS		
Down	Down		
Blank	Back / Return		
Keystone Up	Vol+		
Keystone Down	Vol-		
Preset	>>I / Preset+		

Original	Substitut


<https://mandis.cat/ca/Benq/1067323-24532-comandament-de-substitucio-per-Benq-PB6110.html>