
 

 

 
 






 
 




 
 
 




 




Original	Substitut	Original	Substitut
 ON/OFF	On/Off		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Picture		Format
	Sound		Dual
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Back		Back
	FAV		Shift + Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R





Original		Substitut		Original	Substitut
	You Tube		Media		
	Netflix		Shift + Media		
	Smart		Smart		
	Rec/DVD Menu		Rec		
	I<<		I<<		
	>>I		>>I		
	Stop		Stop		
	Rec List/DVD		List		
	<<		<<		
	>>		>>		
	Play		Play		
	Pause		Pause		
	Red/Goto		Red		
	Green/A-B		Green		
	Yellow/Angle		Yellow		
	Blue/Repeat		Blue		

