
























 







































 




 











Original	Substitut	Original	Substitut
 Standby	 Shift + Mute / Dimmer	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 Left	 Left
 ATV	 Shift + AV / Input / RDS	 OK	 OK
 TV / Radio	 TV/Radio /	 Right	 Right
 TV Guide	 Guide / EPG / -/--	 Menu	 Menu / Home
 USB	 Shift + 8	 Down	 Down
 S. Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 USB I<<<	 I<<< / Preset-	 1	 1
 USB >>>	 >>> / Preset+	 2	 2
 USB Stop	 Stop / Hold	 3	 3
 P. Mode	 Picture / Format	 4	 4
 USB <<<	 <<< / Tune-	 5	 5
 USB >>>	 >>> / Tune+	 6	 6
 USB Play/Pause	 Shift + Play /	 7	 7
 USB Play/Pause	 Play / Slow	 8	 8
 AV Source	 AV / Input / RDS	 9	 9
 Up	 Up	 0	 0





Original	Substitut
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Subtitle	 Subtitle / EQ
 Aspect	 Shift + Picture / Format
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Index	 Eject / Surround
 Reveal	 Shift + Back / Return

Original	Substitut
 Power Display	 Power
 Power Display	 Shift + Power
 Size	 Zoom / Size
 Hold / 3D	 Shift + Stop /
 Hold / 3D	 Shift + 3

