
























 


















 
 




 
 








 











Original	Substitut	Original	Substitut
 ON/OFF	On/Off	 Power	Power
 MUTE	Mute	 MUTE / DIMMER	Mute / Dimmer
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 TV GUIDE	Tv Guide	 GUIDE EPG	Guide / EPG / -/--
	Recall	 SHIFT + RETURN BACK	Shift + Back / Return
	Picture	 PICTURE FORMAT	Picture / Format
	Sound	 SOUND TITLE	Sound / Title
	Source	 RDS AV INPUT	AV / Input / RDS
	Vol+	 VOL +	Vol+
	Vol-	 VOL -	Vol-
	CH+	 CH PAGE +	CH+ / Page+
	CH-	 CH PAGE -	CH- / Page-
	Menu	 HOME MENU	Menu / Home
	Exit	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Back	 RETURN BACK	Back / Return
	FAV	 PC FAV MARKER	Fav / Marker / PC
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Info	 ANGLE INFO	Info / Angle
	Text	 GOTO TEXT	Text / Goto
	Subtitle	 EQ SUBTITLE	Subtitle / EQ
	TV	 PROGRAM TV RADIO	TV/Radio /



