



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Sleep		0
	0 / Sleep		Sleep / Timer
	TV/Rad		TV/Radio /
	TV / SAT		AV / Input / RDS
	CH+		CH+ / Page+
	CH-		CH- / Page-

Original	Substitut	Original	Substitut
	Vol+		Vol+
	Vol-		Vol-
	Menu		Menu / Home
	Recall		Back / Return
	P+		Shift + CH+ /
	P-		Shift + CH- /
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red / V-FMT		Red / Netflix / Search
	Red / V-FMT		Picture / Format





Original	Substitut	Original	Substitut
 Green	 Green / APP / Repeat	 II>	 Shift + Right
 Yellow	 Yellow / YouTube / Repeat	 Movie	 Smart / List
 Blue / Timer	 Blue / Prime Video / Random	 USB	 Shift + 8
 Blue / Timer	 Shift + Sleep / Timer	 USB	 Display / Media
 Info	 Info / Angle		
 Subt	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		
 Find	 Shift + Red / Netflix /		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 <II	 Shift + Left		

