



 



 



 


 
 



 

 

 

 

 







 

 

 






 
 


 
 


 
 
 


 


 









 




 



 

 


 






Original	Substitut	Original	Substitut
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 FAV/List	 Dual
 Recall	 Pre Ch	 Freeze	 Options
 Source	 AV	 Tv/Radio	 TV/R
 Menu	 Menu	 Rec	 Rec
 P.Mode	 Shift + Format	 Red	 Red
 S.Mode	 Shift + Dual	 Green	 Green

Original	Substitut	Original	Substitut
 Exit	 Exit	 Display	 Shift + Info
 Enter	 Ok	 Up	 Up
 Down	 Down	 Left	 Left
 Right	 Right	 Vol+	 Vol +
 Vol-	 Vol -	 CH+	 Ch +
 CH-	 Ch -	 FAV/List	 Dual
 Freeze	 Options	 Tv/Radio	 TV/R
 Rec	 Rec	 Red	 Red
 Green	 Green		





Original	Substitut
Yellow	Yellow
Cyan	Blue
<</Guide	<<
>>/Aspect	>>
<</Cancel	+  Shift + Subt
>> /Sub.Pg	Back
Stop/Index	Stop
Play/Pause/Time Shift	Play
Subtitle	Subt
Text	Text
Reveal	+  Shift + Options
Size	Format
Hold	Eject
DTV/ATV	Info
Rec List	D. Menu
Sleep	Sleep
MTS	+  Shift + Sleep

Original	Substitut

