



Original	Substitut	Original	Substitut
Standby	Power	CH+	CH+ / Page+
Mute	Mute / Dimmer	Vol-	Vol-
1	1	Display	Display / Media
2	2	CH-	CH- / Page-
3	3	Up	Up
4	4	Left	Left
5	5	OK/Enter	OK
6	6	Right	Right
7	7	Menu	Menu / Home
8	8	Down	Down
9	9	Exit	Exit / Cancel / Clear
0	0	Source	AV / Input / RDS
-/-	Shift + Guide / EPG / -/-	P.Mode	Picture / Format
Recall	Back / Return	S.Mode	Sound / Title
Vol+	Vol+	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Play/Pause / Size	Zoom / Size
Auto	Smart / List	Play/Pause / Size	Play / Slow

Original	Substitut	Original	Substitut
CH+	CH+ / Page+	CH+	CH+ / Page+
Vol-	Vol-	CH-	CH- / Page-
Display	Display / Media	Up	Up
CH-	CH- / Page-	Left	Left
Up	Up	OK/Enter	OK
Left	Left	Right	Right
OK/Enter	OK	Menu	Menu / Home
Right	Right	Down	Down
Menu	Menu / Home	Exit	Exit / Cancel / Clear
Down	Down	Source	AV / Input / RDS
Exit	Exit / Cancel / Clear	P.Mode	Picture / Format
Source	AV / Input / RDS	S.Mode	Sound / Title
P.Mode	Picture / Format	Sleep	Sleep / Timer
S.Mode	Sound / Title	Play/Pause / Size	Zoom / Size
Sleep	Sleep / Timer	Play/Pause / Size	Play / Slow
Play/Pause / Size	Zoom / Size	Play / Slow	Play / Slow



