

Original	Substitut	
On/Off		Power
Mute		Mute / Dimmer
Menu audio		Audio / Lang I/II
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Camera		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Down		Down
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

Original	Substitut	
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random



The image shows a black remote control for a Mandis TV. The remote features a variety of buttons for controlling the television. At the top, there are buttons for Power (a red circle with a white power symbol), Dimmer Mute (a black circle with a white speaker icon and the text 'DIMMER MUTE'), and Shift (a yellow circle with the text 'SHIFT'). Below these are four blue buttons labeled TV, DVD, SAT, and AUX. The next row contains buttons for SLOW, STEP-FREEZE, HOLD, and REC MODE. The following row has buttons for Play, Pause, Stop, and a red Record button. The next row includes TUNE-, TUNE+, PRESET-, and PRESET+ buttons. The following row has buttons for Left Arrow, Right Arrow, Left Arrow with a double bar, and Right Arrow with a double bar. The next row includes TITLE, LANG III, EQ, and SURROUND buttons. The following row has buttons for SOUND, AUDIO, SUBTITLE, and a button with an upward arrow. The next row includes FORMAT, SIZE, TIMER, and PROGRAM buttons. The following row has buttons for PICTURE, ZOOM, SLEEP, and TV/RADIO buttons. The next row includes TOP MENU, OPT-TOOLS, GOTO, and RDS buttons. The following row has buttons for D.MENU, SETUP, TEXT, and AV INPUT buttons. Below these are buttons for HOME, MENU, and INFO. The center of the remote features a large blue directional pad with an OK button in the middle. To the left of the pad are buttons for CLEAR, EXIT, and CANCEL. To the right are buttons for RETURN, BACK, and a button with a plus sign and 'CH PAGE'. Below the directional pad are buttons for LIST, SMART, MEDIA, and DISPLAY. The bottom section of the remote includes a numeric keypad (0-9) with additional functions like VIDEO, TAPE, TUNER, AUX-HDD, USB, BLUETOOTH, HDMI-SAT, and PC. There are also buttons for GUIDE EPG, FAV MARKER, and a row of four colored buttons: Netflix (red), App (green), YouTube (yellow), and Prime Video (blue). At the very bottom, there are buttons for SEARCH, REPEAT, REPEAT A-B, and RANDOM. The Mandis logo is prominently displayed in the center of the remote, and the website www.mandis.tv is printed at the bottom.

Original	Substitut	Original	Substitut
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Update	 Play / Slow	OK Enter	 OK
Reveal	 Pause / Step / Freeze	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Surround	 Eject / Surround	Volume+	 Vol+
4.# 16:9	 Picture / Format	Browse	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4



Original	Substitut		Original	Substitut
5		5		
6		6		
7		7		
8		8		
9		9		
Guide -/-- 1.		Guide / EPG / -/--		
0/10		0		
2.Fav P/C 2.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Nicam/Mono		Shift + Audio / Lang I/II		
Mix Scan		Shift + Text /		
Level L		Shift + Left		
Level R/Woofer		Shift + Right		
3.*		Shift + 3		

