



















 



 








 
 



 










 




























 

 


Original	Substitut
 Power	 Power
 Power Tv	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Txt	 Text / Goto
 0	 0
 [<>]/4:3/16:9	 Picture / Format
 TV	 Subtitle / EQ
 Radio	 TV/Radio /
 Up	 Up

Original	Substitut
 Help	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Music	 Audio / Lang I/II
 Down	 Down
 WWW	 Display / Media
 Video	 +  Shift + 4
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol+ Tv	 +  Shift + Vol+
 M	 Menu / Home
 Prog+	 CH+ / Page+
 Vol-	 Vol-





Original	Substitut
 Vol- Tv	 Shift + Vol-
 Back	 Back / Return
 Prog-	 CH- / Page-
 Mute	 Mute / Dimmer
 Mute Tv	 Shift + Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Buy	 Fav / Marker / PC
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+

Original	Substitut

