





 
 
 


 









































Original	Substitut
	Power
	Input
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Lang
	0
	TXT
	V+
	Mute
	P+























Substitut	Original
Power	
AV / Input / RDS	
1	
2	
3	
4	
5	
6	
7	
8	
9	
Audio / Lang I/II	
0	
Text / Goto	
Vol+	
Mute / Dimmer	
CH+ / Page+	

Original	Substitut
	V-
	Home
	P-
	[G]
	i
	Up
	Left
	OK
	Right
	Back
	Down
	Exit
	Netflix
	YouTube
	prime video
	Rakuten Tv
	twitch

Substitut	Original
Vol-	
Menu / Home	
CH- / Page-	
Guide / EPG / -/--	
Info / Angle	
Up	
Left	
OK	
Right	
Back / Return	
Down	
Exit / Cancel / Clear	
Shift + Red / Netflix /	
Shift + Yellow / YouTube /	
Shift + Blue / Prime	
TV/Radio /	
Shift + Green / APP / Repeat	





Original	Substitut	Original	Substitut
	*1		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

