 


 














 





 











 





















 




 

 

 



 


 
 
 








Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Text / Play/Pause	 Play / Slow	 Left	 Left
 Text / Play/Pause	 Pause / Step / Freeze	 Enter	 OK
 Text / Play/Pause	 Text / Goto	 Right	 Right
 Still / Stop	 Stop / Hold	 Down	 Down
 Radio	 TV/Radio /	 Info	 Info / Angle
 Aspect / Size	 Zoom / Size	 Exit	 Exit / Cancel / Clear
 Red / <<	 << / Tune-	 Vol +	 Vol+
 Red / <<	 Red / Netflix / Search	 Index	 Display / Media
 Green / >>	 Green / APP / Repeat	 CH +	 CH+ / Page+
 Green / >>	 >> / Tune+	 Vol -	 Vol-
 Yellow / I<<	 Yellow / YouTube / Repeat	 List	 Smart / List
 Yellow / I<<	 I<< / Preset-	 CH -	 CH- / Page-
 Blue / >>I	 >>I / Preset+	 1	 1
 Blue / >>I	 Blue / Prime Video / Random	 2	 2
 Source	 AV / Input / RDS	 3	 3





Original	Substitut	Original	Substitut
4	4	 4	4
5	5	 5	5
6	6	 6	6
7	7	 7	7
8	8	 8	8
9	9	 9	9
	Audio / I/II		Audio / Lang I/II
0	0	 0	0
	DVB		D.Menu / Top
	FAV		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/--
	Prev. CH.		Back / Return
	Cancel	 + 	Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	USB	 + 	Shift + 8
	Rec		Rec / Rec Mode

Original	Substitut

