




























































 




 






Original	Substitut	Original	Substitut
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Substitut	Original	Substitut
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 TUNE-	 HOLD	 PRESET-	 REC MODE
 TUNE+	 PRESET-	 PRESET+	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 ANGLE	 INFO	 INFO
 OK	 OK	 OK	 OK
 EXIT	 RETURN	 BACK	 BACK
 CANCEL	 LIST	 SMART	 SMART
 VOL+	 MEDIA	 CH PAGE	 CH PAGE
 VOL-	 DISPLAY	 TV	 DVD
 1	 CD - STB	 2	 TAPE
 2	 TUNER	 3	 VIDEO
3	AUX - HDD	 4	 USB
4	USB	5	BLUETOOTH
5	BLUETOOTH	6	TV/RADIO
6	TV/RADIO	7	HDMI - BAT
7	HDMI - BAT	8	PC
8	PC	9	FAV MARKER
9	FAV MARKER	0	GUIDE EPG
0	GUIDE EPG	NETFLIX	APP
-/--	NETFLIX	YouTube	Prime Video
Recall	RETURN / BACK	SEARCH	REPEAT
Red	NETFLIX / SEARCH	REPEAT A-B	RANDOM
Green	APP / REPEAT	SEARCH	REPEAT
Yellow	YouTube / REPEAT A-B	REPEAT A-B	RANDOM
		MENU	HOME / MENU





Original		Substitut		Original		Substitut	
	Exit		Exit / Cancel / Clear		>> /Subpage		>> / Preset+
	EPG		Guide / EPG / -/--				
	P.Mode		Picture / Format				
	S.Mode		Sound / Title				
	Sleep		Sleep / Timer				
	Text		Text / Goto				
	PVR/Hold		Setup / OPT /				
	Size		Zoom / Size				
	FAV		Fav / Marker / PC				
	Play		Play / Slow				
	Pause/Timeshift		Pause / Step / Freeze				
	Stop/Auto		Stop / Hold				
	Reveal		D.Menu / Top				
	Subtitle		Subtitle / EQ				
	<</Nicam		<< / Tune-				
	>>/Freeze		>> / Tune+				
	<</Index		<< / Preset-				

