
 





 

 




 

 
 
 







 

 

 

 


 




 


 





 



 


 





 





Original	Substitut	Original	Substitut
 Power	 Power	 Nicam	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Source	 AV / Input / RDS
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Display	 Display / Media
 9	 9	 Vol+	 Vol+
 0	 0	 CH+	 CH+ / Page+
 -/--	 Shift + Guide / EPG / -/--	 Vol-	 Vol-
 Recall	 Back / Return	 List	 Smart / List
 P.Mode	 Picture / Format	 FAV/List	 Fav / Marker / PC
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Sleep	 Sleep / Timer	 Tv/Radio	 TV/Radio /

Original	Substitut	Original	Substitut
 Nicam	 Audio / Lang I/II	 Menu / Home	 Menu / Home
 Menu	 Menu / Home	 Up	 Up
 Up	 Up	 Source	 AV / Input / RDS
 Source	 AV / Input / RDS	 Left	 Left
 Left	 Left	 OK	 OK
 OK	 OK	 Right	 Right
 Right	 Right	 Down	 Down
 Down	 Down	 Exit	 Exit / Cancel / Clear
 Exit	 Exit / Cancel / Clear	 Display	 Display / Media
 Display	 Display / Media	 Vol+	 Vol+
 Vol+	 Vol+	 CH+	 CH+ / Page+
 CH+	 CH+ / Page+	 Vol-	 Vol-
 Vol-	 Vol-	 List	 Smart / List
 List	 Smart / List	 FAV/List	 Fav / Marker / PC
 FAV/List	 Fav / Marker / PC	 CH-	 CH- / Page-
 CH-	 CH- / Page-	 Tv/Radio	 TV/Radio /





Original	Substitut
EPG	GUIDE EPG Guide / EPG / -/--
ASPECT	SHIFT + FORMAT PICTURE Shift + Picture / Format
FREEZE	STEP - FREEZE II Pause / Step / Freeze
INDEX	ANGLE INFO Info / Angle
CANCEL	SHIFT + CLEAR EXIT Shift + Exit / Cancel / Clear
SUBPAGE	EQ SUBTITLE Subtitle / EQ
TEXT	GOTO TEXT Text / Goto
REVEAL	TOP MENU D.MENU D.Menu / Top
SIZE	SIZE ZOOM Zoom / Size
HOLD	HOLD Stop / Hold
MIX	OPT-TOOLS SETUP Setup / OPT /
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Cyan	Prime Video RANDOM Blue / Prime Video / Random

Original	Substitut

