





 

 



 


 
 
 

 

 




 

 
 
 
 

 
 

 















Original	Substitut	Original	Substitut
 Power	 Power	 Slow	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Zoom	 Smart
 4	 4	 Navi	 Media
 5	 5	 Play	 Play
 6	 6	 Pause	 Pause
 7	 7	 <<	 <<
 8	 8	 >>	 >>
 9	 9	 Rec	 Rec
 0	 0	 Stop	 Stop
 Info	 Info	 UP	 Up
 ADV	 Pre Ch	 Down	 Down
 Page+	 >>	 Right	 Right
 Page-	 <<	 Left	 Left
 Audio	 Dual	 OK	 Ok

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 SAT
 1	 1	 SOUND	 AD
 2	 2	 DISC NAV	 SETTINGS
 3	 3	 LIST	 OPT
 4	 4	 PROG	 ECO
 5	 5	 SLEEP	 3D
 6	 6	 E-MANUAL	 TIMER
 7	 7	 D.MENU	 AV
 8	 8	 REPEAT	 ZOOM
 9	 9	 TEXT	 UP
 0	 0	 TOP MENU	 DISPLAY
 INFO	 INFO	 MENU	 OK
 ADV	 ADV	 LEFT	 RIGHT
 PAGE+	 PAGE+	 CLEAR	 RETURN
 PAGE-	 PAGE-	 EXIT	 BACK
 AUDIO	 AUDIO	 HOME	 SMART
		 APP	 MEDIA
		 VOL+	 CH+
		 VOL-	 CH-
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	7
		7	8
		8	9
		9	0
		0	FAV
		 GUIDE	 PRE-CH
		 A	 B
		 C	 D
		 Mandis SHOP	 www.mandis.tv



