


 
 
 
 




 

 
 















 




 





Original	Substitut
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Red / Netflix / Search
	<< / Tune-
	Green / APP / Repeat
	Stop / Hold

Original	Substitut
	Yellow / Play
	Yellow / YouTube / Repeat
	>> / Tune+
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	D.Menu / Top
	Back / Return
	Exit / Cancel / Clear
	Info / Angle
	CH+ / Page+
	TV/Radio /
	Vol+
	CH- / Page-





Original	Substitut
 MENU	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1
 PIP	 Picture / Format

Original	Substitut





Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	A/B		Shift + Yellow / YouTube /
	Red / <<<		<<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / Stop		Green / APP / Repeat

Original	Substitut	Original	Substitut
	Green / Stop		Stop / Hold
	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+





Original	Substitut	Original	Substitut
Prog -	CH- / Page-		
Menu	Menu / Home		
Vol -	Vol-		
TV/SAT	Smart / List		
TXT	Text / Goto		
Stop	Pause / Step / Freeze		
EXT	Display / Media		
SAT1 + OK	Shift + 2		
SAT2 + OK	Shift + 3		
TV + OK	Shift + 1		





Original	Substitut		
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	✓		Guide / EPG / -/--
	0		0
	A/B		Shift + Yellow / YouTube /
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-
	Green / Stop		Stop / Hold

Original	Substitut		
	Green / Stop		Green / APP / Repeat
	Yellow / Play		Play / Slow
	Yellow / Play		Yellow / YouTube / Repeat
	Blue / >>		>> / Tune+
	Blue / >>		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI		D.Menu / Top
	Exit / Recall		Back / Return
	Exit / Recall		Exit / Cancel / Clear
	Info		Info / Angle
	Prog +		CH+ / Page+
	TV / Radio		TV/Radio /
	Vol +		Vol+





Original	Substitut	Original	Substitut
 Prog -	 CH- / Page-		
 Menu	 Menu / Home		
 Vol -	 Vol-		
 TV/SAT	 Smart / List		
 TXT	 Text / Goto		
 Stop	 Pause / Step / Freeze		
 EXT	 Display / Media		
 SAT1 + OK	 Shift + 2		
 SAT2 + OK	 Shift + 3		
 TV + OK	 Shift + 1		

