











Original	Substitut
	Power
	Info
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Eject
	Dual
	Mute
	Back
	Pre Ch

Original	Substitut
	Up
	Ch +
	Down
	Ch -
	Right
	Vol +
	Left
	Vol -
	Ok
	Menu
	Exit
	Blue
	Pause
	Red
	Text
	Smart
	Yellow








 

 



 




 










 









 

 









 

 


 
 


 
 

 
 
 


 



Original	Substitut
 Yellow / Subtitle	 Subt
 TV / AV	 AV
 Green / P/N	 Green
 SAT	 Media
 TV / Radio	 TV/R
 EPG	 Guide

Original	Substitut

 

 



 

 



 

 




Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 Ch +
 Red	 Red	 CH-	 Ch -
 Green	 Green	 Up	 Up
 Yellow	 Yellow	 Down	 Down
 Blue	 Blue	 Right	 Right
 TV/SAT	 AV	 Left	 Left
 TV/Radio	 TV/R	 OK	 Ok
 Zoom	 Eject	 Vol+	 Vol +
 List	 List	 Vol-	 Vol -
 Audio	 Dual	 P+	 P+
 EPG	 Guide	 P-	 P-
 Timer	 Shift + AV	 Recall	 Pre Ch
 Text	 Text	 FAV	 Shift + Pre Ch
 Exit	 Exit	 1	 1
 Menu	 Menu	 2	 2
 M/P	 Media	 3	 3
 Mute	 Mute	 4	 4





Original	Substitut	Original	Substitut
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Pause		Pause

