



| Original  | Substitut | Original  | Substitut         |
|---|-----------|---|-------------------|
|    | Power     |    | Power             |
|    | Source    |    | AV / Input / RDS  |
|    | 1         |    | 1                 |
|    | 2         |    | 2                 |
|    | 3         |    | 3                 |
|    | 4         |    | 4                 |
|    | 5         |    | 5                 |
|    | 6         |    | 6                 |
|    | 7         |    | 7                 |
|   | 8         |   | 8                 |
|  | 9         |  | 9                 |
|  | TV        |  | TV/Radio /        |
|  | 0         |  | 0                 |
|  | Recall    |  | Fav / Marker / PC |
|  | V+        |  | Vol+              |
|  | Mute      |  | Mute / Dimmer     |
|  | P+        |  | CH+ / Page+       |

| Original  | Substitut      | Original  | Substitut             |
|---|----------------|---|-----------------------|
|    | V-             |    | Vol-                  |
|    | World/Internet |    | Smart / List          |
|    | P-             |    | CH- / Page-           |
|    | Menu           |    | Menu / Home           |
|    | Q.Menu         |    | D.Menu / Top          |
|    | Up             |    | Up                    |
|    | Left           |    | Left                  |
|    | OK             |    | OK                    |
|    | Right          |    | Right                 |
|   | Down           |   | Down                  |
|  | Back           |  | Back / Return         |
|  | Exit           |  | Exit / Cancel / Clear |
|  | i              |  | Info / Angle          |
|  | Music/Camera   |  | Display / Media       |
|  | TV Guide       |  | Guide / EPG / -/-     |
|  | */O            |  | Shift + 1             |
|  | */Q            |  | Shift + 2             |





|   | Original | Substitut   | Original | Substitut                   |
|---|----------|---|----------|-----------------------------|
|    | [≡]/Text |  GOTO<br>TEXT          |          | Text / Goto                 |
|    | Red      |  NETFLIX<br>SEARCH     |          | Red / Netflix / Search      |
|    | Green    |  APP<br>REPEAT         |          | Green / APP / Repeat        |
|    | Yellow   |  YouTube<br>REPEAT A-B |          | Yellow / YouTube / Repeat   |
|    | Blue     |  Prime Video<br>RANDOM |          | Blue / Prime Video / Random |
|    | Lang     |  LANG I/II<br>AUDIO    |          | Audio / Lang I/II           |
|    | [≡]..    |  TITLE<br>SOUND        |          | Sound / Title               |
|    | [-O-]    |  OPT-TOOLS<br>SETUP    |          | Setup / OPT /               |
|    | <<       |  TUNE-<br>◀            |          | << / Tune-                  |
|    | Pause    |  STEP-FREEZE<br>       |          | Pause / Step / Freeze       |
|   | >>       |  TUNE+<br>▶           |          | >> / Tune+                  |
|  | Rec      |  REC MODE            |          | Rec / Rec Mode              |
|  | Play     |  SLOW                |          | Play / Slow                 |
|  | Stop     |  HOLD                |          | Stop / Hold                 |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |
|   |          |   |          |                             |

