

 









 

 

 







 

 





 



 



 









 



 















Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	Recall		Back / Return
	Size Aspect		Zoom / Size
	Index		Info / Angle
	Up.PG		CH+ / Page+
	Reveal		Smart / List
	Sub.PG		Display / Media
	Down.PG		CH- / Page-
	Up/CH+		Up
	Vol-		Vol-
	Left		Left
	Enter		OK
	Vol+		Vol+
	Right		Right
	Scan		Setup / OPT /
	Down/CH-		Down
	Tv/AV		AV / Input / RDS
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/DVB-Menu		Stop / Hold
	Exit/Eject		Exit / Cancel / Clear
	Sleep/USB-C.R.		Sleep / Timer



