 






 
 



 



 
 


 
 
 
 

 
 
 
 


 
 

 
 


 
 


 
 
 

 
 
 

 



 

 
 
 



 







Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Red	 Red
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 Green	 Green
 9	 9	 EPG	 Guide
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 TTX	 Text
 Exit	 Exit	 Audio	 Dual
 Up	 Up	 i	 Info
 Down	 Down	 FAV	 Pre Ch
 Right	 Right	 Tv/Radio	 TV/R

Original	Substitut	Original	Substitut
 MUTE	 SHIFT	 TV	 AUX
 PLAY MODE	 REC MODE	 Play	 Pause
 DISC NAV	 SOUND	 Fast Backward	 Fast Forward
 LIST	 SUBT	 AD	 SETTINGS
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 MENU	 TOP MENU	 OK	 INFO
EXIT	CLEAR	Left	Right
VOL+	HOME	RETURN	BACK
VOL-	SMART	APP	CH-
1	MEDIA	+	CH+
2	GUIDE	0	PRE-CH
3	A	4	B
4	C	5	D
5	Mandis SHOP	6	www.mandis.tv
6	www.mandis.tv	7	
7		8	
8		9	
9		0	
0		FAV	
MENU		GUIDE	
EXIT		0	
CH+		PRE-CH	
CH-		TVR	
V+			





Original		Substitut		Original	Substitut
VIDEO	Video	HOME SMART	Smart		
SCAN	Scan	APP MEDIA	Media		
DEVICE	Device	SETTINGS OPT	Options		
FILE	File	DISC NAV LIST	List		
ZOOM	Zoom	ZOOM	Eject		
ROLL	Roll	TIMER AV	AV		
RECORD	Record	REC MODE	Rec		
PREV	Prev.	⏮	I<<		
NEXT	Next	⏭	>>I		
▶/	Play	▶	Play		
▶/	Pause		Pause		
⏪	<<	⏪	<<		
⏩	>>	⏩	>>		

