




 


 
 
 

 

 
 


 

 



 
 


 

 













 

 



 



 



 
 


















 








Original	Substitut	Original	Substitut
	Power		Power
	Tv/Rad		TV/Radio /
	Mute		Mute / Dimmer
	Text		Text / Goto
	[...]/Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	[+]/Mosaic		D.Menu / Top
	Sleep		Sleep / Timer
	II/Freeze		Shift + Pause / Step /
	Zoom		Zoom / Size
	Guide		Guide / EPG / -/--
	i/Info		Info / Angle
	Recall		Back / Return
	Group		Display / Media
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Vol+		Vol+

Original	Substitut	Original	Substitut
	Left		Left
	CH+		CH+ / Page+
	Up		Up
	↑		Shift + CH+ /
	Vol-		Vol-
	OK		OK
	Right		Right
	↓		Shift + CH- /
	CH-		CH- / Page-
	Down		Down
	File List		Smart / List
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	→		>>  / Preset+





Original	Substitut
 Rec	 Rec / Rec Mode
 I>/Slow	 Shift + Play /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 V-Format	 Picture / Format
 0	 0

Original	Substitut
 Wide	 Setup / OPT /

