 
 
 
 
 




Original	Substitut
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/--
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substitut
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Eco	 D.Menu / Top
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze





Power

DIMMER MUTE

SHIFT

TV DVD SAT AUX

SLOW STEP-FREEZE HOLD REC MODE

Play Pause Stop

TUNE- TUNE+ PRESET- PRESET+

Left Right

TITLE LANG I/II EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

UP DOWN LEFT RIGHT

CLEAR RETURN

EXIT BACK

CANCEL

LIST

SMART

MEDIA

DISPLAY

+

VOL

-

CH PAGE

TV DVD CD- STB

1 2 3

VIDEO TAPES

4 5 6

AUX- HDD USB BLUETOOTH

7 8 9

PC

HDMI- SAT

GUIDE EPG FAV MARKER

0

Netflix App YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv



Original	Substitut
 Power	 Power
 CBL/SAT	 +  Shift + 0
 DVD	 +  Shift + 2
 TV Audio	 +  Shift + 1
 Blu-ray	 +  Shift + 5
 AUX1	 +  Shift + 7
 Tuner	 +  Shift + 6
 Bluetooth	 +  Shift + 9
 Game	 +  Shift + Fav / Marker / PC
 AUX2	 +  Shift + Guide / EPG / -/--
 Phono	 +  Shift + 4
 USB	 +  Shift + 8
 Media Player	 Display / Media
 CD	 +  Shift + 3
 Online Music	 Smart / List
 Internet Radio	 +  Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substitut
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 +  Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+







Original	Substitut
 Power	 Power
 CBL/SAT	 +  Shift + 0
 DVD	 +  Shift + 2
 TV Audio	 +  Shift + 1
 Blu-ray	 +  Shift + 5
 AUX1	 +  Shift + 7
 Tuner	 +  Shift + 6
 Bluetooth	 +  Shift + 9
 Game	 +  Shift + Fav / Marker / PC
 AUX2	 +  Shift + Guide / EPG / -/--
 Phono	 +  Shift + 4
 USB	 +  Shift + 8
 Media Player	 Display / Media
 CD	 +  Shift + 3
 Online Music	 Smart / List
 Internet Radio	 +  Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substitut
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 +  Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+



