









 

 

 

 
























Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Recall	 Back / Return
 PMode	 Picture / Format
 I / II	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--

Original	Substitut
 Sleep	 Sleep / Timer
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 FAV	 Fav / Marker / PC
 Vol +	 Vol+
 ADD / DEL	 Shift + Back / Return
 PR +	 CH+ / Page+
 Vol -	 Vol-
 Cancel	 Shift + Exit / Cancel / Clear
 PR -	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Substitut
	Green / APP / Repeat 
	Yellow / YouTube / Repeat 
	Blue / Prime Video / Random 
	Play / Slow 
	Shift + Play / 
	Stop / Hold 
	Setup / OPT / 
	Eject / Surround 
	Shift + I<</> Preset- 
	I<</> Preset- 
	<< / Tune- 
	Zoom / Size 
	Sound / Title 
	>>I / Preset+ 
	Shift + >>I / Preset+ 
	>> / Tune+ 
	Shift + Rec / Rec Mode 

Original	Substitut
	Subpage / Rec 
	Smart / List 