



Original	Substitut	Original	Substitut
POWER	Power	GAME / BLUE	Blue / Prime Video / Random
1	1	SLEEP / GREEN	Green / APP / Repeat
2	2	SLEEP / GREEN	Sleep / Timer
3	3	STATUS /	Yellow / YouTube / Repeat
4	4	PP/CANCEL	Exit / Cancel / Clear
5	5	P.S	Display / Media
6	6	MUTE	Mute / Dimmer
7	7	UP	Up
8	8	CH+	CH+ / Page+
9	9	TV/TEXT	Text / Goto
0	0	LEFT	Left
SUBPAGE	Guide / EPG / -/--	VOL-	Vol-
I/II	Audio / Lang I/II	MENU	Menu / Home
SWAP / RED	Back / Return	RIGHT	Right
SWAP / RED	Red / Netflix / Search	VOL+	Vol+
AV	AV / Input / RDS	DOWN	Down
FREEZE	Pause / Step / Freeze	CH-	CH- / Page-

Original	Substitut	Original	Substitut
GAME / BLUE	Blue / Prime Video / Random	TV	DVD
SLEEP / GREEN	Green / APP / Repeat	SAT	AUX
SLEEP / GREEN	Sleep / Timer	SLOW	STEP - FREEZE
STATUS /	Yellow / YouTube / Repeat	HOLD	REC MODE
PP/CANCEL	Exit / Cancel / Clear	TUNE-	TUNE+
P.S	Display / Media	PRESET-	PRESET+
MUTE	Mute / Dimmer	TITLE	LANG I/II
UP	Up	EQ	SURROUND
CH+	CH+ / Page+	SOUND	AUDIO
TV/TEXT	Text / Goto	SUBTITLE	TIMER
LEFT	Left	PICTURE	ZOOM
VOL-	Vol-	SLEEP	TV RADIO
MENU	Menu / Home	TOP MENU	OPT-TOOLS
RIGHT	Right	D.MENU	SETUP
VOL+	Vol+	GOTO	RDS
DOWN	Down	AV INPUT	AV INPUT
CH-	CH- / Page-	HOME	ANGLE



