



 


 
 



 

 

 

 















 



 


 
 
 

 

 
 

 
 

 




 










Original	Substitut	Original	Substitut
 Power	 Power	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 G	 Guide
 4	 4	 i	 Info
 5	 5	 Back	 Back
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Lang	 Dual	 OK	 Ok
 TXT	 Text	 Netflix	 Media
 Vol+	 Vol +	 YouTube	 Shift + Media
 Vol-	 Vol -	 *1	 Format
 Mute	 Mute	 Prime Video	 Shift + Smart
 Source	 AV	 Red	 Red

Original	Substitut	Original	Substitut
 P+	 Ch +	 TV	 AUX
 P-	 Ch -	 DVD	 REC MODE
 Home	 Smart	 SAT	 PLAY MODE
 G	 Guide	 AUX	 STOP
 i	 Info	 DUAL	 SUBT
 Back	 Back	 AD	 SETTINGS
 Exit	 Exit	 LIST	 OPT
 Up	 Up	 SOUND	 PICTURE
 Down	 Down	 SEARCH	 ECO
 Right	 Right	 TV/R	 FORMAT
 Left	 Left	 REPEAT	 3D
 OK	 Ok	 ZOOM	 TIMER
 Netflix	 Media	 D.MENU	 TEXT
 YouTube	 Shift + Media	 TOP MENU	 AV
 *1	 Format	 MENU	 DISPLAY
 Prime Video	 Shift + Smart	 OK	 INFO
 Red	 Red	 EXIT	 BACK



