 



 

 
 
 
 
 
 
 

 
 


 



 

 

 

 
 
 







| Original | Substitut |
|---|--|
|  DVD / TV / AV |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Mute |  Mute |
|  Repeat / TV/Radio |  TV/R |
|  Repeat / TV/Radio |  Shift + Text |
|  Exit |  Exit |
|  Up / CH+ |  Up |
|  Up / CH+ |  Ch + |

| Original | Substitut |
|--|--|
|  Down / CH- |  Down |
|  Down / CH- |  Ch - |
|  Right / Vol+ |  Right |
|  Right / Vol+ |  Vol + |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol - |
|  OK |  Ok |
|  Pg Up |  Shift + Ch + |
|  Pg Dn |  Shift + Ch - |
|  Title |  Smart |
|  Info |  Info |
|  Goto / FAV |  Pre Ch |
|  Audio |  Dual |
|  Sub-T |  Subt |
|  Zoom / TTX |  Text |
|  Zoom / TTX |  Eject |
|  Setup |  Options |





| Original | Substitut | Original | Substitut |
|-------------------|-----------|----------|-----------|
| Menu / EPG | Menu | | |
| Menu / EPG | Guide | | |
| USB | Media | | |
| Play / Pause | Play | | |
| Play / Pause | Pause | | |
| Stop | Stop | | |
| Copy/Delete / Rec | Rec | | |
| Red / <<< | Red | | |
| Red / <<< | <<< | | |
| Green / >>> | Green | | |
| Green / >>> | >>> | | |
| Yellow / I<<< | Yellow | | |
| Yellow / I<<< | I<<< | | |
| Blue / >>>I | >>>I | | |
| Blue / >>>I | Blue | | |
| | | | |
| | | | |

