



 

 

 



 

 

 



 

 









 























 



 

 

 

 





Original	Substitut	Original	Substitut
 POWER	 Power	 REPEAT/GREEN/▼	 Green / APP / Repeat
 INFO	 Info / Angle	 7	 7
 HDMI CONTROL	 Smart / List	 8	 8
 SLEEP	 Sleep / Timer	 9	 9
 SCREEN	 Picture / Format	 ROOT/YELLOW	 Yellow / YouTube / Repeat
 SOURCE	 AV / Input / RDS	 RETURN	 Back / Return
 PRESETS	 Setup / OPT /	 0	 0
 1	 1	 MENU	 Menu / Home
 2	 2	 TITLE/BUE	 Sound / Title
 3	 3	 TITLE/BUE	 Blue / Prime Video / Random
 ZOOM/RED/▲	 Zoom / Size	 UP	 Up
 ZOOM/RED/▲	 Shift + CH+ /	 LEFT	 Left
 ZOOM/RED/▲	 Red / Netflix / Search	 OK/SELECT	 OK
 4	 4	 RIGHT	 Right
 5	 5	 DOWN	 Down
 6	 6	 P+	 CH+ / Page+
 REPEAT/GREEN/▼	 Shift + CH- /	 P-	 CH- / Page-

Page-





Original	Substitut
	VOL - Vol-
	VOL + Vol+
	PC FAV MARKER Fav / Marker / PC
	LANG I/II Audio / Lang I/II
	EQ SUBTITLE Subtitle / EQ
	DIMMER MUTE Mute / Dimmer
	SHIFT + RETURN BACK Shift + Back / Return
	GUIDE EPG Guide / EPG / -/--
	TOP MENU D.MENU D.Menu / Top
	GOTO TEXT Text / Goto
	CLEAR EXIT CANCEL Exit / Cancel / Clear
	MEDIA DISPLAY Display / Media
	SHIFT + ANGLE INFO Shift + Info / Angle
	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
	REC MODE Rec / Rec Mode
	HOLD Stop / Hold
	SLOW Play / Slow

Original	Substitut
	STEP - FREEZE Pause / Step / Freeze
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	PRESET- I<< / Preset-
	PRESET+ >>I / Preset+

