 



 

 







 
 
 



 

 


 
 

 


 




 

 

 



 

 


 


 



 

 
 
 


 










 
 
 

 

 
 

 


 

 

 





 
 

 






Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 Source	 AV
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 Exit	 Exit
 7	 7	 Display	 Shift + Info
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CH+	 Ch +
 DTV/ATV	 Info	 CH-	 Ch -
 Recall	 Pre Ch	 MTS	 Shift + Sleep
 P.Mode	 Shift + Format	 Rec List	 D. Menu
 S.Mode	 Shift + Dual	 FAV/List	 Dual
 Sleep	 Sleep	 Rec	 Rec

Original	Substitut	Original	Substitut
 Menu	 Menu	 Source	 AV
 Enter	 Ok	 Up	 Up
 Down	 Down	 Left	 Left
 Right	 Right	 Exit	 Exit
 Display	 Shift + Info	 Vol+	 Vol +
 Vol-	 Vol -	 CH+	 Ch +
 CH-	 Ch -	 MTS	 Shift + Sleep
 Rec List	 D. Menu	 FAV/List	 Dual
 Rec	 Rec		





	Original	Substitut		Original	Substitut
	Freeze	 OPT Options			
	<</Guide	 <<			
	>>/Aspect	 >>			
	I<</Cancel	 +  Shift + Subt			
	>>I/Sub.Pg	 BACK Back			
	Stop/Index	 Stop			
	Play/Pause/Time Shift	 Play			
	Tv/Radio	 TV/R TV/R			
	Subtitle	 Subt			
	Reveal	 +  OPT Shift + Options			
	Size	 FORMAT Format			
	Hold	 Eject			
	Text	 TEXT Text			
	Red	 Red			
	Green	 Green			
	Yellow	 Yellow			
	Cyan	 Blue			

