


 



 

 







 

 

 

 

 

 

 

 






 


 

 

 

 








 
 





 



 




Original	Substitut	Original	Substitut
	Power		Power
	Select		Menu
	:≡		Smart
	Tv		TV/R
	Red/B		Red
	Green/A		Green
	Blue/X		Blue
	Yellow/Y		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	←		Guide
	Info/Guide		Info
	Message		Subt
	?/Options		Options
	[]/↔		Dual
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Mute		Mute
	Left		Left
	OK		Ok





Original		Substitut		Original	Substitut
	Free		Media		
	Rec		Rec		
	<<		<<		
	Play/Pause		Play		
	Stop		Stop		
	>>		>>		
	<<		<<		
	>>		>>		
	Start		AV		
	Up(Games)		Shift + Up		
	Down(Games)		Shift + Down		
	Right(Games)		Shift + Right		
	Left(Games)		Shift + Left		

