



 

 


 



 

 

 

 






 




 














 


Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Substitut
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / Guide	 << / Tune-
 << / Guide	 Guide / EPG / -/--
 Play/Pause / Timeshift	 Play / Slow
 >> / Aspect	 >> / Tune+
  << / Cancel	  << / Preset-
 >>  / Subpage	 >>  / Preset+
 Stop / Index	 Info / Angle
 Stop / Index	 Stop / Hold
 TV / Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Setup / OPT /
 Size	 Zoom / Size

Original	Substitut
 Hold	 Shift + Stop /
 Text	 Text / Goto

