



	Original	Substitut		Original	Substitut
	Power		Power		0/VCR
	[ + ]		Info / Angle		Guide / EPG / -/--
	Mute		Mute / Dimmer		Vol-
	Tv/AV		AV / Input / RDS		Tv/Text
	1		1		F.P.
	2		2		[i]/Index
	3		3		[+]/Hold
	CH+		CH+ / Page+		Red
	4		4		Green
	5		5		Yellow
	6		6		Blue
	CH-		CH- / Page-		<< / Tune-
	7		7		Play
	8		8		>> / Tune+
	9		9		Stop
	Vol+		Vol+		[?]/Reveal
	C		Back / Return		[o]/Time Text
					0
					Guide / EPG / -/--
					Vol-
					Tv/Text
					F.P.
					[i]/Index
					[+]/Hold
					Red / Netflix / Search
					Green / APP / Repeat
					Yellow / YouTube / Repeat
					Blue / Prime Video / Random
					<< / Tune-
					Play / Slow
					>> / Tune+
					Stop / Hold
					[?]/Reveal
					[o]/Time Text



