






 
 



 















 






 


 
 


 







 



 



 



 



 





Original	Substitut	Original	Substitut
Power	Power	Vol -	Vol -
1	1	OK	OK
2	2	Down	Down
3	3	P-	CH / Page-
4	4	i	Info / Angle
5	5	Format / Picture	Picture / Format
6	6	TXT	Text / Goto
7	7	Mute	Mute / Dimmer
8	8	Red/ AKT	Red / Netflix / Search
9	9	Green/ Timer	Sleep / Timer
0/ AV	AV / Input / RDS	Green/ Timer	Green / APP / Repeat
0/ AV	0	Yellow [I]	Yellow / YouTube / Repeat
Up	Up	Blue/ [++]	Blue / Prime Video / Random
P+	CH+ / Page+	- 0	<< / Tune-
Right	Right	0+	>> / Tune+
Vol +	Vol +	- *	I << / Preset-
Left	Left	*	>> / Preset+





Original	Substitut	Original	Substitut
 Power	 Power	 Vol -	 Vol -
 1	 1	 OK	 OK
 2	 2	 P-	 CH / Page-
 3	 3	 Down	 Down
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/ AKT	 Red / Netflix / Search
 9	 9	 Green/ Timer	 Green / APP / Repeat
 AV 0	 AV / Input / RDS	 Green/ Timer	 Sleep / Timer
 AV 0	 0	 Yellow [I]	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+	 Blue/ [++]	 Blue / Prime Video / Random
 Up	 Up	 - 0	 << / Tune-
 Right	 Right	 0+	 >> / Tune+
 Vol +	 Vol +	 - *	 I << / Preset-
 Left	 Left	 *+	 >> / Preset+

Original	Substitut	Original	Substitut
 DIMMER MUTE		 TV	 DVD
 SLOW	 STEP-FREEZE	 HOLD	 AUX
 TUNE-	 TUNE+	 PRESET-	 REC MODE
 TITLE	 LANG UI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 OK	 RETURN
 CANCEL	 LIST	 VOL +	 CH PAGE
 SMART	 MEDIA	 TV	 DVD
 DISPLAY	 REPEAT	 CD- STB	 VIDEO
 TAPE	 TUNER	 1	 2
 AUX- HDD	 USB	 3	 4
 BLUETOOTH	 HDMI- SAT	 5	 6
 FC	 FAV MARKER	 7	 8
 NETFLIX	 APP	 0	 9
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
 www.mandis.tv			



