








Original		Substitut		Original		Substitut	
	Index		Play / Slow		6		6
	Red / -1		Red / Netflix / Search		Contrast-		<< / Tune-
	Green / Timer /		Green / APP / Repeat		Contrast+		>> / Tune+
	Yellow / Stop		Yellow / YouTube / Repeat		7		7
	Blue / Reveal		Blue / Prime Video / Random		8		8
	[≡]]]		Rec / Rec Mode		9		9
	Cancel		Exit / Cancel / Clear		Brightness-		I<< / Preset-
	Size		Zoom / Size		Brightness+		>>I / Preset+
	TV		TV/Radio /		P/C		Back / Return
	Text		Text / Goto		0		0
	1		1		AV		AV / Input / RDS
	2		2		←•→		Display / Media
	3		3		**		Smart / List
	Tint-		Shift + Left		PIP		Picture / Format
	Tint+		Shift + Right		i		Info / Angle
	4		4		i		Menu / Home
	5		5		----		Subtitle / EQ





Original	Substitut	Original	Substitut
 Up / P+	 Up		
 Up / P+	 CH+ / Page+		
 Mute	 Mute / Dimmer		
 Left / Vol-	 Left		
 Left / Vol-	 Vol-		
 OK	 OK		
 Right / Vol+	 Right		
 Right / Vol+	 Vol+		
 AUX	 SHIFT +  Shift + 7		
 Down / P-	 Down		
 Down / P-	 CH- / Page-		
 Power	 Power		





Original	Substitut	Original	Substitut
	<		I<< / Preset-
	>		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	P+		CH+ / Page+
	P-		CH- / Page-
	Power		Power





Original	Substitut	Original	Substitut
-1	Red	SEARCH	Red / Netflix / Search
+1	Green/Timer	REPEAT	Green / APP / Repeat
STOP	Yellow	REPEAT A-B	Yellow / YouTube / Repeat
E7	Blue	RANDOM	Blue / Prime Video / Random
	TXT	TEXT	Text / Goto
	1	1	1
	2	2	2
	3	3	3
	4	4	4
	5	5	5
	6	6	6
	-0		<< / Tune-
	0+		>> / Tune+
	7	7	7
	8	8	8
	9	9	9
	-*		I<< / Preset-
	*+		>>I / Preset+
	P/C	BACK	Back / Return
	0	0	0
	PIP	PICTURE	Picture / Format
	i	INFO	Info / Angle
	P+		CH+ / Page+
	Up		Up
	Mute		Mute / Dimmer
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	AUX	+	Shift + 7
	P-		CH- / Page-
	Down		Down
	Power		Power

