



Original	Substitut	Original	Substitut
	On		Power
	Off	+	Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]	+	Shift + Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow



 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 


 
 
 



 


 
 


 


 









Original	Substitut
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
OSD	Back
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	Shift + 2
AVR	Shift + 1
CD	Shift + 3
Tape	Shift + 4
VID1/VCR	Shift + 5
VID2/TV	Shift + 6
VID3/CBL/SAT	Shift + 7
VID4	Shift + 8
AM/FM	Shift + 9
6 CH.	Guide

Original	Substitut
> DVD	Play
<< DVD	<<
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I





Original		Substitut		Original		Substitut	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear		Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<

 








 
 

 




 


 


 
 
 

 

 

 



 
 


 














 

 















Original	Substitut	Original	Substitut
	Play		Play
	Stop		Stop
	Pause		Pause
	>>I		>>I
	I<<		I<<





Original		Substitut		Original		Substitut	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





Original		Substitut	
	3 VCR	+	Shift + 3
	4 VCR	+	Shift + 4
	5 VCR	+	Shift + 5
	6 VCR	+	Shift + 6
	7 VCR	+	Shift + 7
	8 VCR	+	Shift + 8
	9 VCR	+	Shift + 9
	0 VCR	+	Shift + 0
	Clear VCR		Exit
	Play VCR		Red
	Stop VCR		Green
	Rec VCR		Rec
	>> VCR		Blue
	<< VCR		Yellow

Original		Substitut	





	Original	Substitut		Original	Substitut
	<>	 PLAY MODE	Play		
	>>		>>		
	<<		<<		
	Stop		Stop		
	Rec	 REC MODE	Rec		

