



Original	Substitut
Off	Shift + Power
On	Power
Mute	Mute / Dimmer
AVR	Smart / List
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Shift + 4
VID2/TV	Shift + 1
VID3/CBL/SAT	Shift + 0
VID4	Shift + 7
AM/FM	Shift + 6
6 CH	Shift + 8
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Original	Substitut
Night	TV/Radio /
M-Room	Zoom / Size
Vol-	Vol-
CH.	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	OK
Right	Right
Digital	D.Menu / Top
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5













 

 




 





 



 


















 




Original	Substitut
6	TUNER 6
7	AUX - HDD 7
8	USB 8
TUN-M	NETFLIX SEARCH Red / Netflix / Search
9	BLUETOOTH 9
0	HDMI - BAT 0
MEM	APP REPEAT Green / APP / Repeat
Tuning ▲	TUNE+ >> / Tune+
DIRECT	RETURN BACK Back / Return
CLEAR	CLEAR EXIT CANCEL Exit / Cancel / Clear
Preset ▲	PRESET+ >>I / Preset+
Tuning ▼	TUNE- << / Tune-
OSD	MEDIA DISPLAY Display / Media
RDS	RDS AV INPUT AV / Input / RDS
Preset ▼	PRESET- I<< / Preset-
<< DVD	SHIFT + TUNE- Shift + << /
Play DVD	SHIFT + SLOW Shift + Play / Slow

Original	Substitut
>> DVD	SHIFT + TUNE+ Shift + >> /
Stop DVD	SHIFT + HOLD Shift + Stop /
Pause DVD	SHIFT + STEP - FREEZE Shift + Pause / Step /
I<</Skip Down	SHIFT + PRESET- Shift + I<< / Preset-
Skip Up/>>I	SHIFT + PRESET+ Shift + >>I / Preset+

















































 



 



 















Original	Substitut
 Power Off	 Shift + Power
 Power On	 Power
 Vol+	 Vol+
 Night	 TV/Radio /
 [≡] / M-Room	 Zoom / Size
 Vol-	 Vol-
 CH.	 Info / Angle
 Up	 Up
 SPKR/Menu	 Menu / Home
 Left	 Left
 Set	 OK
 Right	 Right
 Digital/Exit	 D.Menu / Top
 Down	 Down
 Delay/Normal	 Setup / OPT /
 1	 1
 2	 2

Original	Substitut
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M	 Red / Netflix / Search
 9	 9
 0	 0
 Mem	 Green / APP / Repeat
 Direct	 Back / Return
 Clear	 Exit / Cancel / Clear
 Preset ▲	 Shift + Preset+
 RDS	 AV / Input / RDS
 Preset ▼	 Shift + Preset-
 <<	 << / Tune-
 Play	 Play / Slow







Original	Substitut	Original	Substitut
 Power On	 Power	 Mem	 Green / APP / Repeat
 Power Off	 Shift + Power	 RDS	 AV / Input / RDS
 Vol-	 Vol-	 >>	 >> / Tune+
 Vol+	 Vol+	 <<	 << / Tune-
 SPKR/Menu	 Menu / Home	 Play	 Play / Slow
 1	 1	 Stop	 Stop / Hold
 Delay/Normal	 Setup / OPT /	 Direct	 Back / Return
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Preset ▲	 CH+ / Page+
 4	 4	 >>	 >>  / Preset+
 5	 5	  <<	  << / Preset-
 6	 6	 Power (On/Off)	 Mute / Dimmer
 7	 7	 PR+ VCR	 Shift + CH+ /
 8	 8	 PR- VCR	 Shift + CH- /
 9	 9	 Vol- VCR	 Shift + Vol-
 0	 0	 Vol+ VCR	 Shift + Vol+
 Tun-M	 Red / Netflix / Search	 1 VCR	 Shift + 1





