























 










 









Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	Power		Power
	PP		Back / Return
	I-II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / -/--
	P<P		Fav / Marker / PC
	Menu		Menu / Home

Original	Substitut	Original	Substitut
	Info		Info / Angle
	Left		Left
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Down		Down
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Red/Sound		Red / Netflix / Search
	Red/Sound		Sound / Title
	Green/Picture		Green / APP / Repeat
	Green/Picture		Picture / Format
	Yellow/Feature		Yellow / YouTube / Repeat
	Blue/Install		Blue / Prime Video / Random
	TV		TV/Radio /
	AV		AV / Input / RDS





Original	Substitut	Original	Substitut
[≡]	GOTO TEXT Text / Goto		
[/≡]	SHIFT + GOTO TEXT Shift + Text /		
[≡o]	TIMER SLEEP Sleep / Timer		
[≡+]	HOLD Stop / Hold		
[≡x]	OPT-TOOLS SETUP Setup / OPT /		
[≡◇]	SIZE ZOOM Zoom / Size		
[≡?]	LIST SMART Smart / List		
[≡i]	MEDIA DISPLAY Display / Media		

