




Original	Substitut
	 Zoom / Size
	 Eject / Surround
	 Power
	 Guide / EPG / -/--
	 Mute / Dimmer
	 Rec / Rec Mode
	 Back / Return
	 Fav / Marker / PC
	 2
	 3
	 4
	 1
	 8
	 5
	 6
	 7
	 0

Original	Substitut
	 Shift + Guide / EPG / -/--
	 AV / Input / RDS
	 9
	 Smart / List
	 Shift + Audio / Lang I/II
	 CH+ / Page+
	 Vol-
	 Menu / Home
	 Vol+
	 Audio / Lang I/II
	 CH- / Page-
	 Shift + Picture / Format
	 Stop / Hold
	 Setup / OPT /
	 Pause / Step / Freeze
	 Display / Media
	 << / Tune-





Original	Substitut	Original	Substitut
	Fwd		>> / Tune+
	Prev		I<< / Preset-
	Next		>>I / Preset+
	D.Menu		D.Menu / Top
	Up		Up
	Repeat		Shift + Green / APP /
	A-B		Shift + Yellow / YouTube /
	Left		Left
	Play / Enter		Play / Slow
	Play / Enter		OK
	Right		Right
	Slow		Shift + Play /
	Angle		Info / Angle
	Down		Down
	Title / PBC		Shift + Sound / Title
	Search		Shift + Red / Netflix /
	Program		TV/Radio /

Original	Substitut	Original	Substitut
	Subtitle		Subtitle / EQ
	D.Call		Shift + Fav / Marker / PC
	Hold		Shift + Stop /
	[-]		Shift + Subtitle / EQ
	Mix		Shift + Text /
	Text		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Shift + << /
	Size		Shift + Zoom /
	Subpage / Time		Shift + >> /
	Exit		Exit / Cancel / Clear
	Red / Picture		Picture / Format
	Red / Picture		Red / Netflix / Search
	Green / Sound		Sound / Title
	Green / Sound		Green / APP / Repeat
	Yellow / Time		Sleep / Timer
	Yellow / Time		Yellow / YouTube / Repeat



Program

