



Original	Substitut	Original	Substitut
Standby	Power	2	2
Mute	Mute / Dimmer	3	3
Up	Up	4	4
Left	Left	5	5
OK	OK	6	6
Right	Right	7	7
Down	Down	8	8
Menu	Menu / Home	9	9
Exit	Exit / Cancel / Clear	0	0
Red / UHF	Red / Netflix / Search	EPG	Guide / EPG / -/-
Green / Audio	Green / APP / Repeat	Group	Smart / List
Green / Audio	Audio / Lang I/II	Vol+	Vol+
Yellow / Pause	Yellow / YouTube / Repeat	Vol-	Vol-
Yellow / Pause	Pause / Step / Freeze	CH+	CH+ / Page+
Blue / Recall	Blue / Prime Video / Random	CH-	CH- / Page-
Blue / Recall	Back / Return	Page+	Shift + CH+
1	1	Page-	Shift + CH-

Original	Substitut	Original	Substitut
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - SAT	0
EPG	Guide / EPG / -/-	LIST	Smart / List
Group	Smart / List	VOL+	Vol+
Vol+	Vol+	VOL-	Vol-
Vol-	Vol-	CH+	CH+ / Page+
CH+	CH+ / Page+	CH-	CH- / Page-
CH-	CH- / Page-	PAGE+	Shift + CH+
Page+	Shift + CH+	PAGE-	Shift + CH-
Page-	Shift + CH-		



