



Original	Substitut	Original	Substitut
 Power	 Power	 V-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 P-	 CH- / Page-
 3	 3	 [G]	 Guide / EPG / -/--
 4	 4	 *	 D.Menu / Top
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 Text	 Text / Goto	 Back	 Back / Return
 0	 0	 Exit	 Exit / Cancel / Clear
 i	 Info / Angle	 Netflix	 Shift + Red / Netflix /
 Menu	 Menu / Home	 YouTube	 Shift + Yellow / YouTube /
 V+	 Vol+	 prime video	 Shift + Blue / Prime
 Mute	 Mute / Dimmer	 Disney+	 Setup / OPT /
 P+	 CH+ / Page+	 Tik Tok	 Picture / Format



[illegible]