




 

 
 

 
 

 








Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	Bluetooth		9
	Vol+		Vol+
	Vol-		Vol-
	>I		>>I / Preset+
	I<		I<< / Preset-
	Pair		OK
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	EQ		Subtitle / EQ
	Surr		Audio / Lang I/II
	Dimmer+		Right
	Dimmer-		Left
	Bass		Up
	Treble		Down

Original	Substitut

