

 


Original	Substitut	Original	Substitut
	Power		Power
	Mute/Subtitle		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Input		AV / Input / RDS
	=		Menu / Home
	Up		Up
	Info/Text		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-

Original	Substitut	Original	Substitut
	Micro		Smart / List
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide/CHList		Guide / EPG / -/-
	0		0
	♥+		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat





Original	Substitut	Original	Substitut
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Disney+		Shift + 1
	max		Shift + 4
	VOD		Shift + 5
	TFI+		Shift + 6
	Netflix		Shift + Red / Netflix /
	Canal+		Shift + 3
	TV Channels+		Shift + 2
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime

Original	Substitut

