



Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 Source (Games)	 Eject / Surround
 Movie-Music-Phot	 Picture / Format
 [≡]..	 Zoom / Size
 */O	 Sleep / Timer
 TV	 TV/Radio /
 Q.Menu	 D.Menu / Top
 [-O-]	 Setup / OPT /
 [≡]/Text	 Text / Goto

Original	Substitut
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 BACK	 Back / Return
 Vol+	 Vol+
 World (Violet)	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 */Q	 Display / Media
 PR-	 CH- / Page-
 1./@	 1
 2abc	 2





Original	Substitut	Original	Substitut
3 def	3	CO - STB	3
4 ghi	4	VIDEO	4
5 jkl	5	TAPE	5
6 mno	6	TUNER	6
7 pqrs	7	AUX - HDD	7
8 tuv	8	USB	8
9 wxyz	9	BLUETOOTH	9
Guide	Guide / EPG / -/--	GUIDE EPG	
0	0	HDMI - BAT	0
Red	Red / Netflix / Search	NETFLIX SEARCH	
Green	Green / APP / Repeat	APP REPEAT	
Yellow	Yellow / YouTube / Repeat	YouTube REPEAT A-B	
Blue	Blue / Prime Video / Random	Prime Video RANDOM	
Recall	Shift + Back / Return	SHIFT + RETURN BACK	

