















 

 

 













 

 



 



 











 

 

 

 



 





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang / I/II
	[≡]..		Subtitle / EQ
	Text		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	←		Back / Return
	V+		Vol+
	Smart		Smart / List
	P+		CH+ / Page+
	V-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original	Substitut	Original	Substitut
9	9		
Guide	Guide / EPG / /-/-		
0	0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Home	Shift + Menu /		
Netflix	Shift + Red / Netflix /		
YouTube	Shift + Yellow / YouTube /		

Original	Substitut

