



Original	Substitut	Original	Substitut
Power	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
Vol+	Vol+		
CH+	CH+ / Page+		
Vol-	Vol-		
Mute	Mute / Dimmer		
CH-	CH- / Page-		
Source	AV / Input / RDS		





 










 


Original	Substitut	Original	Substitut
	Power		Red / Netflix / Search
	1		Up
	2		Left
	3		OK
	4		Right
	5		Exit / Cancel / Clear
	6		Down
	7		Info / Angle
	8		CH+ / Page+
	9		CH- / Page-
	0		
	Menu		
	<<		
	Play		
	>>		
	Stop		
	Pause		





Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

Original	Substitut	Original	Substitut
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK/List		OK
	OK/List		Shift + Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Last		Back / Return
	Vol+		Vol+
	Info		Info / Angle












Original	Substitut	Original	Substitut
CH+	CH+ / Page+	Source	AV / Input / RDS
Vol-	Vol-	Wide	Zoom / Size
Mute	Mute / Dimmer	V-Format	Picture / Format
CH-	CH- / Page-		
I>	Shift + Play /		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
?	D.Menu / Top		
Audio	Audio / Lang I/II		
[...]	Subtitle / EQ		
[=]	Sound / Title		
[≡ ≡]	Smart / List		
OPT+	Setup / OPT /		
Edit	Fav / Marker / PC		
Teletext	Text / Goto		
Tv/Radio	TV/Radio /		
Sleep	Sleep / Timer		

Original	Substitut	Original	Substitut
Source	AV / Input / RDS		
Wide	Zoom / Size		
V-Format	Picture / Format		





Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	>>		>> / Tune+
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK/List		OK

Original	Substitut	Original	Substitut
	OK/List		Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Info		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-

