

 





 

 



 


 













 

 

 

 


 
 

 

 



 


 




 






Original	Substitut	Original	Substitut
 Power	 Power	 Still	 Pause
 Mute	 Mute	 S.Mode	 Shift + Dual
 1	 1	 Sleep	 Sleep
 2	 2	 Volume+	 Vol +
 3	 3	 Volume-	 Vol -
 4	 4	 Channel+	 Ch +
 5	 5	 Channel-	 Ch -
 6	 6	 PIP On/Off	 Smart
 7	 7	 Source	 Shift + AV
 8	 8	 Size	 Eject
 9	 9	 Swap	 Back
 0	 0	 Up / P-CH +	 Up
 /--	 Guide	 Down / P-CH -	 Down
 Preview	 Pre Ch	 Right	 Right
 Sound	 Dual	 Left	 Left
 Picture	 Shift + Format	 Menu	 Menu
 Aspect	 Format	 Menu	 Ok

Original	Substitut	Original	Substitut
 Power	 Power	 TV	 DUAL
 Mute	 Mute	 SAT	 AUX
 1	 1	 PLAY MODE	 REC MODE
 2	 2	 PLAY	 STOP
 3	 3	 PAUSE	 EJECT
 4	 4	 DISC NAV	 SOUND
 5	 5	 DUAL	 SUBT
 6	 6	 PROG	 AD
 7	 7	 SLEEP	 SETTINGS
 8	 8	 TV/R	 OPT
 9	 9	 FORMAT	 ECO
 0	 0	 3D	 TIMER
 /--	 Guide	 E-MANUAL	 REPEAT
 Preview	 Pre Ch	 REPEAT	 ZOOM
 Sound	 Dual	 D.MENU	 TEXT
 Picture	 Shift + Format	 TEXT	 AV
 Aspect	 Format	 TOP MENU	 DISPLAY INFO
		 MENU	 OK
		 MENU	 INFO
		 MENU	 RETURN BACK
		 MENU	 CLEAR
		 MENU	 EXIT
		 MENU	 BACK
		 MENU	 HOME SMART
		MENU	 APP MEDIA
		MENU	 CH +
		MENU	 CH -
		MENU	 VOL +
		MENU	 VOL -
		MENU	1
		MENU	2
		MENU	3
		MENU	4
		MENU	5
		MENU	6
		MENU	7
		MENU	8
		MENU	9
		MENU	0
		MENU	GUIDE
		MENU	PRE-CH
		MENU	A
		MENU	B
		MENU	C
		MENU	D
		MENU	
		MENU	





Original	Substitut	Original	Substitut
	Exit		Exit
	TV / AV		AV
	Info		Info
	Wiper		Media
	PC Auto		Options
	TTX On/Off		Text
	TTX / Mix		Shift + Text
	Index		Shift + Info
	List / FLOF		Shift + Smart
	Store		TV/R
	Hold		Stop
	Reveal		Shift + Subt
	Subpage		Subt
	Size		Shift + Eject
	Red		Red
	Green		Green
	Yellow		Yellow

Original	Substitut	Original	Substitut
	Blue		Blue

