



Original		Substitut		Original		Substitut	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Left		Left
	1		1		Vol-		Vol-
	2		2		Ok		OK
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Media		Display / Media
	6		6		CH-		CH- / Page-
	7		7		Down		Down
	8		8		TV/Radio		TV/Radio /
	9		9		Sleep/Red		Sleep / Timer
	0		0		Subtitle/Green		Subtitle / EQ
	Info		Info / Angle		Teletext/Yellow		Text / Goto
	Epg		Guide / EPG / -/-		Audio/Blue		Audio / Lang I/II
	Menu		Menu / Home		<<		<< / Tune-
	CH+		CH+ / Page+		Play		Play / Slow
	Up		Up		Pause		Pause / Step / Freeze





Original	Substitut
>>	>> / Tune+
Prev	I<< / Preset-
Rec	Rec / Rec Mode
FAV	Fav / Marker / PC
Stop	Stop / Hold

Original	Substitut

