 

 






 

 























Original	Substitut	Original	Substitut
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Original		Substitut	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc Menu		D.Menu / Top
	0		0
	Text / Media		Text / Goto
	Sound		Sound / Title
	Repeat		Shift + Green / APP /

Original		Substitut	





Original	Substitut
	Power
	TV/Radio /
	Back / Return
	Menu / Home
	Up
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	Stop / Hold
	Smart / List
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	>>I / Preset+
	CH+ / Page+

Original	Substitut
	Vol-
	Vol+
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Mute / Dimmer
	Rec / Rec Mode
	AV / Input / RDS
	Setup / OPT /
	Subtitle / EQ
	Display / Media
	Fav / Marker / PC
	Guide / EPG / -/-
	Shift + Smart / List
	Info / Angle





Original		Substitut	
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT	0
TEXT MEDIA CENTER	Text/ Media	GOTO TEXT	Text / Goto
SOUND	Sound	TITLE SOUND	Sound / Title
REPEAT	Repeat	SIZE ZOOM	Zoom / Size
		SHIFT + APP REPEAT	Shift + Green / APP /

Original		Substitut	

