
















Original	Substitut	Original	Substitut
 Power	 Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I	 >>I / Preset+
 Fav	 Fav / Marker / PC	 Source	 AV / Input / RDS
 Guide	 Guide / EPG / -/--	 Up	 Up
 Index	 Info / Angle	 Display	 Display / Media
 Size	 Zoom / Size	 Left	 Left
 Text	 Text / Goto	 OK	 OK
 Hold	 Shift + Stop /	 Right	 Right
 TV/Radio	 TV/Radio /	 TV Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Subpage	 Shift + Subtitle / EQ	 Exit	 Exit / Cancel / Clear
 Play / Pause	 Play / Slow	 Vol+	 Vol+
 Play / Pause	 Pause / Step / Freeze	 Aspect	 Shift + Picture / Format

Original	Substitut	Original	Substitut
 DIMMER MUTE	 SHIFT	 TV	 AUX
 DVD	 SAT	 SLOW	 STEP-FREEZE
 HOLD	 REC MODE	 TUNE-	 TUNE+
 PRESET-	 PRESET+	 TITLE	 LANG UI
 EQ	 SURROUND	 SOUND	 AUDIO
 SUBTITLE	 PROGRAM	 FORMAT	 SIZE
 TIMER	 TV RADIO	 PICTURE	 ZOOM
 RDS	 AV INPUT	 TOP MENU	 OPT-TOOLS
 GOTO	 TEXT	 D.MENU	 SETUP
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 CLEAR	 EXIT
 RETURN	 BACK	 CANCEL	 LIST
 VOL+	 SMART	 TV	 DVD
 CH PAGE	 MEDIA	 VIDEO	 TAPE
 VOL-	 DISPLAY	 4	 5
 TV	 CD-STB	 6	 TUNER
 1	 2	 AUX-HDD	 USB
 2	 3	 7	 HDMI-BAT
 3	 4	 8	 PC
 4	 5	 9	 FAV MARKER
 5	 6	 GUIDE EPG	 0
 6	 7	 NETFLIX	 APP
 7	 8	 YouTube	 Prime Video
 8	 9	 SEARCH	 REPEAT
 9	 0	 REPEAT A-B	 RANDOM
 0	 FAV MARKER		