



| Original | Substitut | Original | Substitut |
|---|-----------|---|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | DTV/ATV |  | Shift + TV/Radio / Program |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |

| Original | Substitut | Original | Substitut |
|---|-----------|---|--------------------------|
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | MTS |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Aspect |  | Shift + Picture / Format |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Media |  | Shift + Display / Media |





| Original | Substitut | Original | Substitut |
|----------|----------------------|----------|---------------------------|
| | Freeze | | Pause / Step / Freeze |
| | Guide | | Guide / EPG / -/-- |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | I<</Cancel | | I<< / Preset- |
| | >>I/Sub.Pg | | >>I / Preset+ |
| | Stop/Index | | Stop / Hold |
| | Play/Pause/Timeshift | | Play / Slow |
| | Tv/Radio | | TV/Radio / |
| | Subtitle | | Subtitle / EQ |
| | Reveal | | Shift + Back / Return |
| | Size | | Zoom / Size |
| | Hold | | Shift + Stop / |
| | Text | | Text / Goto |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |

| Original | Substitut |
|----------|-----------------------------|
| | Cyan |
| | Blue / Prime Video / Random |

